

# Materials Manager

---

## Honeywell MS9540 Wired Scanner Configuration

This document provides the configuration barcodes necessary to set the scanner button to Manual Activation, and to set the minimum code length to 1 digit for the ability to read technician bar codes. Scan the following barcodes in order from top to bottom to configure your wired barcode scanner while giving each scan time to register within the scanner.



### Enter/Exit Configuration Mode



### Enter/Exit Configuration Mode

